


LEDBELYSNING.NO

200W ZIGBEE LED-DIMMER

Art.nr.: 700504

FUNCTION INTRODUCTION

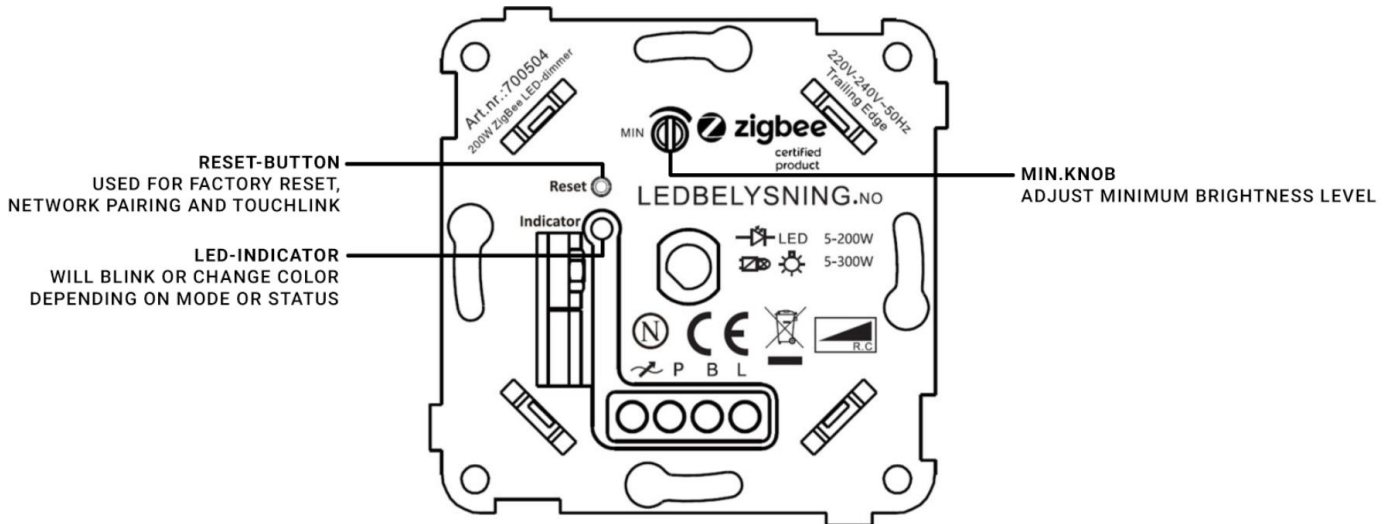

PRODUCT DESCRIPTION

ZIGBEE LED-DIMMER IS A RECESSED MULTIDIMMER.

THE DEVICE IS COMPATIBLE WITH OTHER ZIGBEE SYSTEMS LIKE PHILIPS HUE, OR DIRECTLY THROUGH TOUCHLINK - DEVICE TO DEVICE.

OVER-THE-AIR (OTA) UPDATE

THIS DEVICE SUPPORTS FIRMWARE UPGRADE THROUGH OTA.

INCLUSION (ADD DEVICE TO A ZIGBEE NETWORK)

1. IF PREVIOUSLY ADDED TO ANOTHER NETWORK, PLEASE FACTORY RESET BY PRESSING AND HOLDING **"RESET"** FOR 5 SECONDS. THE INDICATOR LIGHT WILL TURN RED FOR 10 SECONDS TO CONFIRM IT HAS BEEN RESET.
2. SET GATEWAY INTO INCLUSION MODE (SEE GATEWAY MANUAL)
3. SET DEVICE INTO INCLUSION MODE BY PRESSING **"RESET" 2X**. THE INDICATOR LIGHT WILL FLASH BLUE UP TO 15 MINUTES, OR UNTIL PAIRED. IT WILL STAY SOLID BLUE FOR 10 SECONDS IF SUCCESSFUL PAIRING.

EXCLUSION (REMOVE DEVICE FROM A ZIGBEE NETWORK)

1. PRESS **"RESET" 3X** RAPIDLY. THE INDICATOR WILL FLASH PURPLE.
2. THE PURPLE INDICATOR WILL STAY SOLID FOR 10 SECONDS UPON SUCCESSFUL REMOVAL. 180 SECONDS TIMEOUT-LIMIT.

TOUCHLINK PAIRING TO A ZIGBEE REMOTE CONTROLLER

1. PRESS "**RESET**" **4X** RAPIDLY. THE INDICATOR WILL FLASH GREEN WHEN TOUCHLINK COMMISSIONING IS ACTIVE. 180S TIMEOUT-LIMIT.
2. KEEP THE REMOTE CONTROLLER WITHIN 10CM FROM THE ZIGBEE 200W DIMMER.
3. SET THE REMOTE CONTROLLER INTO TOUCHLINK COMMISSIONING MODE (SEE REMOTE CONTROLLER MANUAL).
4. ONCE PAIRED THE REMOTE CONTROLLER AND THE GREEN INDICATOR LIGHT WILL STOP TO FLASH.

NOTE 1: DIRECT TOUCHLINK, NOT CONNECTED TO A ZIGBEE NETWORK: MAX 1 REMOTE CAN BE CONNECTED.

NOTE 2: TOUCHLINK WHEN CONNECTED THROUGH A ZIGBEE NETWORK: MAX 30 REMOTES CAN BE CONNECTED.

NOTE 3: FOR PHILIPS HUE, ADD REMOTE AND DEVICE TO NETWORK BEFORE CONNECTING THROUGH TOUCHLINK

FIND AND BIND-MODE (WHEN DEVICE AND CONTROLLER IS ALREADY CONNECTED TO THE SAME ZIGBEE NETWORK)

1. SET THE DEVICE INTO FIND AND BIND-MODE BY PRESSING "**RESET**" **5X** RAPIDLY. THE INDICATOR LIGHT WILL FLASH YELLOW. 180S TIMEOUT-LIMIT.
2. SET THE REMOTE CONTROLLER INTO FIND AND BIND-MODE (SEE CONTROLLER MANUAL).

SETUP A ZIGBEE NETWORK AND ADD OTHER DEVICES WITHOUT THE NEED FOR A GATEWAY

1. PRESS "**RESET**" **6X** TO ENABLE THE DEVICE TO SETUP A ZIGBEE NETWORK. THE INDICATOR WILL FLASH WHITE AND STAY SOLID FOR 10 SECONDS UPON SUCCESSFULLY CREATING A ZIGBEE NETWORK.
2. PRESS "**RESET**" **7X** TO ALLOW OTHER DEVICES TO BE ADDED INTO THE NETWORK. THE INDICATOR WILL FLASH RED. 180S TIMEOUT-LIMIT.
3. SET ANOTHER DEVICE OR REMOTE CONTROLLER INTO NETWORK PAIRING MODE (SEE DEVICE MANUAL).
4. BIND THE ADDED DEVICES OR REMOTES THROUGH TOUCHLINK SO THEY MAY BE CONTROLLED THROUGH A REMOTE OR CONTROLLER (SEE DEVICE MANUAL).

NOTE: MAX 30 DEVICES.